



Part No. : L1355FZ

Flexzilla® Heavy Duty Lever Action Grease Gun

Loading Your Grease Gun

Pull follower rod from barrel and lock into place.	Pull follower rod from barrel and lock into place.	WARNING: Do not load gun with air operated grease pump. Damage to unit will occur and warranty will be voided.
Unscrew barrel from head.	Unscrew barrel from head.	Wipe bulk filler nipple until clean.
Remove cap from end of grease cartridge.	Insert open end of gun barrel two inches below surface of grease.	Insert bulk filler nipple into loader pump receptacle.
Insert cartridge into barrel, open end down.	Slowly pull back follower rod to draw in grease. Pull follower rod back all the way and lock into place.	Pump grease until 8 inches of follower rod is exposed. (Between the follower rod handle and barrel cap)
Remove pull tab from top of grease cartridge. Make sure cartridge is pushed down completely.	Screw barrel back into head.	Pump grease until barrel is full. (When barrel is full, rod can be pulled out without spring tension)
Screw barrel into head until snug.	Unlock follower rod and push into barrel.	Release follower rod.
Unscrew barrel slightly. (Approximately two revolutions)	If no bleeder valve is installed, unscrew barrel slightly. (Approximately two revolutions) (Skip this step if bleeder valve is installed)	Push follower rod into barrel.
Release follower rod.	Release follower rod.	Prime. (see "Priming Your Grease Gun")
Push follower rod into barrel.	Push follower rod into barrel.	
Screw barrel into head.	Depress bleeder valve to release air. (If bleeder valve is installed)	
Prime. (see "Priming Your Grease Gun")	Prime. (see "Priming Your Grease Gun")	Begin greasing.
Begin greasing.	Begin greasing.	

Priming Your Grease Gun


Point outlet up at least 45 degrees.
Using slow, complete strokes, stroke handle repeatedly until grease flows without air. (Should require 10 - 20 strokes)

Greasing a Zerk (Grease Fitting)

Press coupler onto zerk.
Keep coupler and zerk as closely aligned as possible.
Begin greasing.
To Remove Coupler From Zerk: Tilt coupler to one side, twist and pull. (Failure to follow this procedure may result in damage to coupler or fitting.)

Flexzilla is a registered trademark of Weems Industries, Inc.
The color CHARTREUSE as applied to the body of the grease gun and grease hose is a trademark of Weems Industries, Inc.

Grease Gun Terms

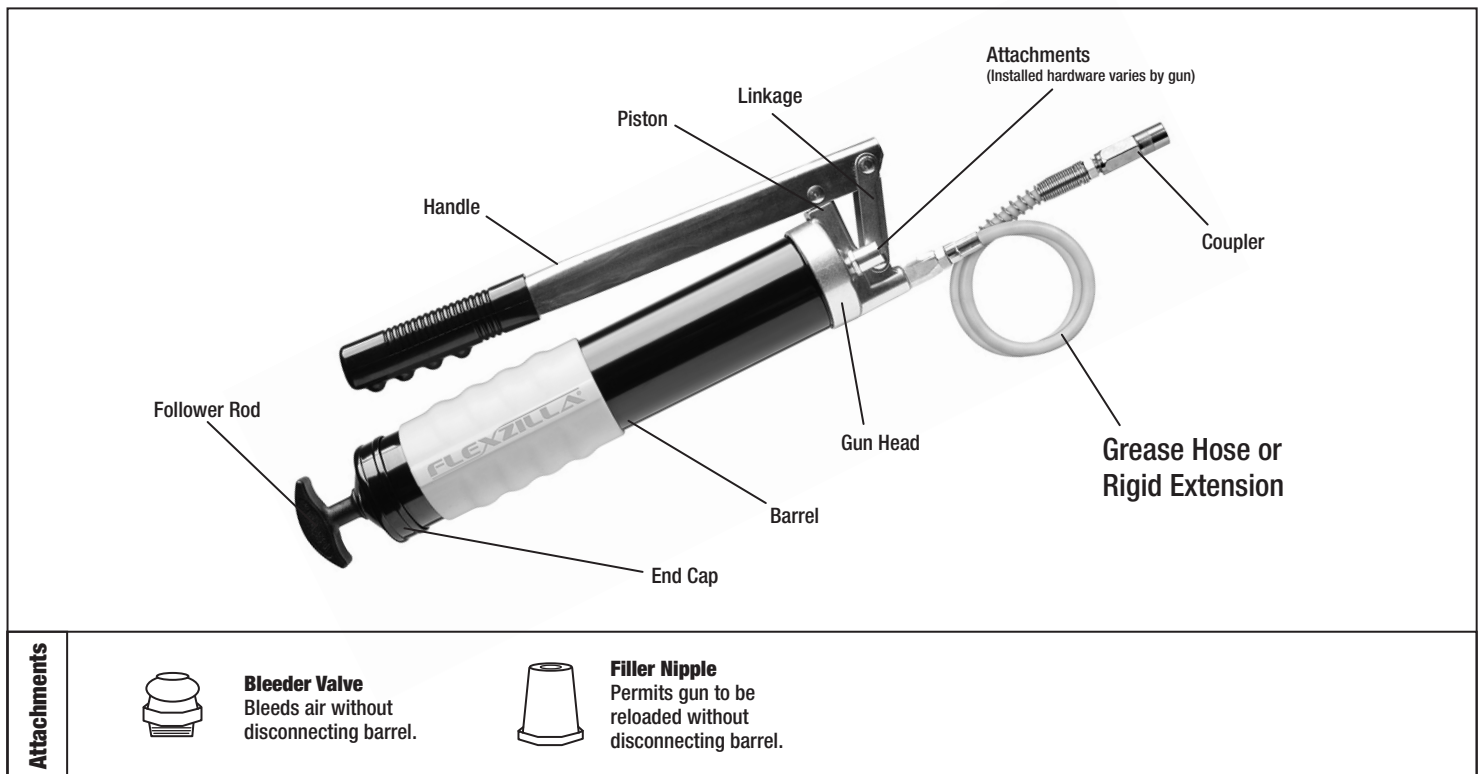

Attachments



Bleeder Valve
Bleeds air without disconnecting barrel.



Filler Nipple
Permits gun to be reloaded without disconnecting barrel.

Troubleshooting Your Grease Gun

Grease does not flow when handle is stroked.	Gun needs to be re-primed	See "Re-Priming Your Grease Gun"
	Grease cartridge is still capped	<ul style="list-style-type: none"> • Check to ensure caps have been removed from both ends of cartridge
	Grease cartridge or barrel is empty	<ul style="list-style-type: none"> • Insert new cartridge or fill barrel • Prime gun
	Blocked Grease Coupler	<ul style="list-style-type: none"> • Remove coupler and pump grease • If grease flows without coupler, clean or replace extension
	Blocked Grease Extension	<ul style="list-style-type: none"> • Remove extension and pump grease • If grease flows without extension, clean or replace extension
Grease leaks between gun head and extension or extension and coupler.	Threads need to be sealed	Apply thread sealant
Grease leaks from coupler body joint or between coupler jaws and grease fitting.	Damaged coupler	Replace coupler
	Damaged grease fitting	Replace fitting

Warranty

LEGACY MANUFACTURING COMPANY ("LEGACY") warrants that this equipment will be free from defects in material and workmanship for a period of one (1) year from the date of purchase, under normal use. LEGACY'S sole obligation under this warranty is limited to replacing or repairing, free of charge, any equipment that proves to be defective under normal conditions and use according to the recommendations of LEGACY. To obtain repair or replacement, the equipment must be shipped to a LEGACY authorized Warranty and Service Center during the warranty period, transportation charges prepaid, with proof of date of purchase. In the event of repair or replacement, the warranty period shall not be extended beyond the original warranty period. While necessary maintenance or repairs on your Legacy equipment can be performed by any company, we recommend that you use only authorized Legacy service centers. Improper or incorrectly performed maintenance or repair voids this warranty. Contact us at service@legacymfg.com or www.legacymfg.com/instruction-manuals/ for installation instructions.